
# F35 E-scooter User Manual

E-scooter

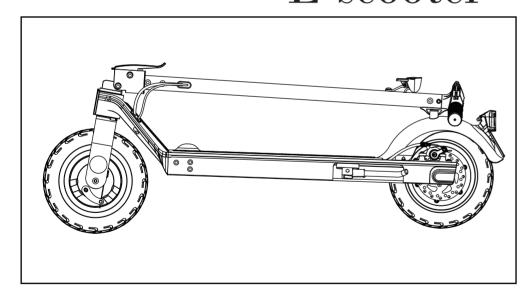




E-scooter

(Picture above is for illustration only)


# The Package contents includes the following parts

Please Contact RND authorized dealers or RND after-service center if there is any missing spare parts

Scooter Frame	Hand Bar Kit			
Installation tool & Screw	Charger			
User manual (English version)				

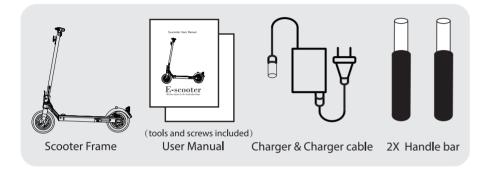

### **Product Structure**

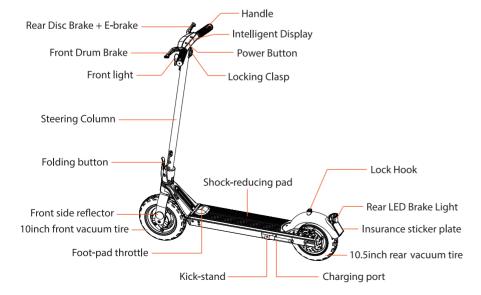

#### **Product Maintenance**

 
### **△** Storage

Avoid placing the scooter in long periods of time in direct sunlight, rain or environments of heavy humidity


During long idle periods, perform battery check and battery charge to ensure batteries fully charge and avoid the battery over-discharge

Kick stand is designed for structural support, Avoid standing on F35 while kick stand is down, this action can cause the kick stand to crack and break

### △ Cleaning

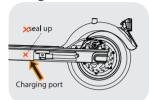

 Before Washing the scooter, Turn off the power of the scooter, Cover DC power receptacle with receptacle cover to prevent water flowing into the power receptacle

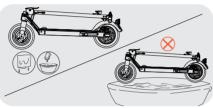


Using cloths and clean or soapy water to wipe the scooter's exterior, Do not immerse the scooter in water at anytime


#### 



 If front tire appears crack and leaking, replace the front tire immediately

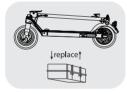

 When experience significant reduction in range, replace battery immediately, please bring used battery to appropriate recycling facility

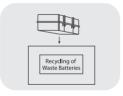

Waste batteries cannot be discarded casually to avoid polluting the environment

### ⚠ Disk-brake distance adjustment

When the braking distance exceeds 3.5M, The tightness of brake line can be adjusted Manually, Tighten the brake line and make sure the disk brake works perfect



1.Unscrew the fixing screw on the brake shaft




2.Adjust the suitable length of the brake line




3.Screw the fixing screw on the brake shaft

## **Assembly instructions**


Check the package contents carefully and make sure all parts are in good condition, then take the scooter out of the box in folding status with kickstand down

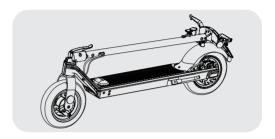

Rotate the handle in a clockwise direction till it is fixed

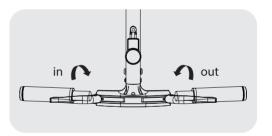


#### Inflation

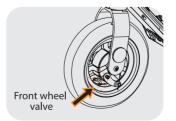

Front tire pressure suggestion (2.5bar / 250 KPA /36PSI)

## Integrated intelligent dashboard

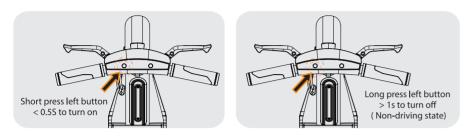


Shut-down automatically after 10mins no using




Total mileage displayed in non-driving state with unit KM Current speed displayed in driving state with unit KM/H



 double click the left button to switch speed mode

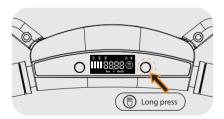

Long press right button to turn on and turn off the front light

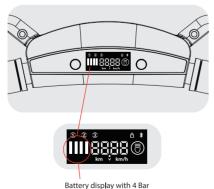

### **Product specification**

Serial Number	Specification	Details	
1	Model	F35	
2	Net Weight	14 ±1KG	
3	Max load	100KG	
4	Max speed	20KM/h	
5	Product size	1120×430×1185MM	
6	Battery	Lithium-ion battery (36V/7.8Ah)	
7	Charging time	5~7hours	
8	Tire type	10inch front vacuum tire 10.5inch rear vacuum tire	

## **Battery specification**

Specification	Details	Note	
Battery type	Lithium-ion battery	Battery operating temp cannot exceed temp	
Charging time	5-7 hours( 36v 7.8Ah)		
Battery model	36V/7.8Ah(280.8Wh)		
Rated output voltage	42V	specified by this table	
Operating tomp	Charge∶ 0~45°C	Charge time varies by environment and battery capacity changes	
Operating temp	Discharge: -20~60℃		
Storage temp	<b>-</b> 20~45℃		
	Battery type Charging time Battery model Rated output voltage Operating temp	Battery type         Lithium-ion battery           Charging time         5-7 hours( 36v 7.8Ah)           Battery model         36V/7.8Ah(280.8Wh)           Rated output voltage         42V           Operating temp         Charge: 0~45°C           Discharge: -20~60°C	

## **Charging safety tips** △

- First time charging requires 5-7 hours
- To Maximize battery life, please charge the battery at least every other month or two days after the last riding
- Batteries must be charged periodically to maintain its charge, neglecting to do so may cause the battery over-discharge which can lead to severe damage to the batteries
- User charger provided by the scooter vendor
- Charging must be conducted in a dry, well ventilated area, make certain power receptacle
  is dry, do not touch power receptacle with wet hands

## **Over Discharge protection**

F35 has the internal over-discharge protection, when the scooter is on shut down state /battery is low, the control system will power off to protect the battery bank, in order to bypass over-discharge protection, the scooter need to be charged to wake up, if the scooter does not wake up 30 minutes charging, contact vendor authorized dealers or vendor post sales service department

# Warning 🗘



Pls make sure ride with helmet and protective gears



Pay attention to avoid obstacles on the road



The wading depth cannot exceed 20 mm



Do not exceed 15-degree slopes while riding

# Do not do 🛆





Do not ride only by one hand Do not play with each other while riding

Do not ride up and down stairs









Do not immerse scooter in water

Do not ride on the vehicle road


Do not ride more than one person at any time



Do not ride on the Slippery road and Ice-snow Roads

# **Folding & Unfolding instructions**


Step 1: Unclasp the locking clasp

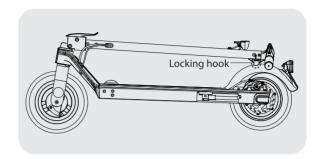

Note:

Slide slip the locking clasp out of the hook

Step 2: Turning to a certain angle to avoid hitting the protective cover when lift steering column up, then push the steering column a little to lock the folding button into final position.

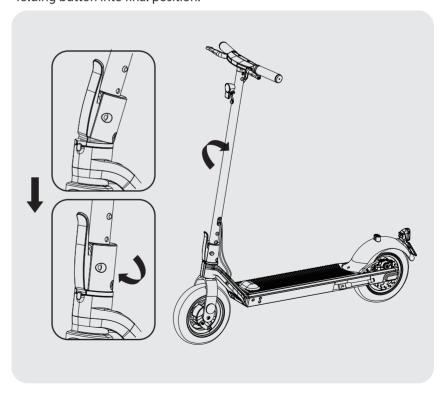


## Folding the scooter

Step 1: Turn the steering column at a certain degree until the folding button is completely away from the protective cover, then press down the folding button



Step 2: Folding down the steering column, Align the locking clasp with the side of the locking hook, then buckle into the locking hook in parallel

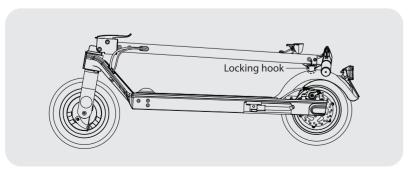

# Checking list before Operation 🔨

The e-scooter involves a few mechanical and electric setting ,Before riding , Inspect each component of the vehicle to ensure normal operation, Below are the points to pay much more attention to:

- (1) Be sure the Utility/Locking hook locked in place
- (2) Check and make sure the handle bar are not in loosen
- (3) Check and make sure the tire is properly inflated
- (4) Check and make sure the battery is fully charged
- (5) Be sure to read the user manual before riding at your first time

### How to ride the e-scooter



1 Hold the handle bars with your hands, and put your right foot on the pedal, then slide your left foot and use the acceleration trigger to push the scooter



2 The harder you press down on the footpad throttle, The faster the speed, Conversely, The slower the speed



3 Use the handbar to turn in the direction you wish



4 To slow down the scooter, disengage the accelerator and squeeze the right brake handle to engage the e-brake and disc brake or squeeze the left brake handle to engage the drum brake